


MODEL FYW-100 THRU 400 & FYWW-100 THRU 400 INSTALLATION INSTRUCTIONS

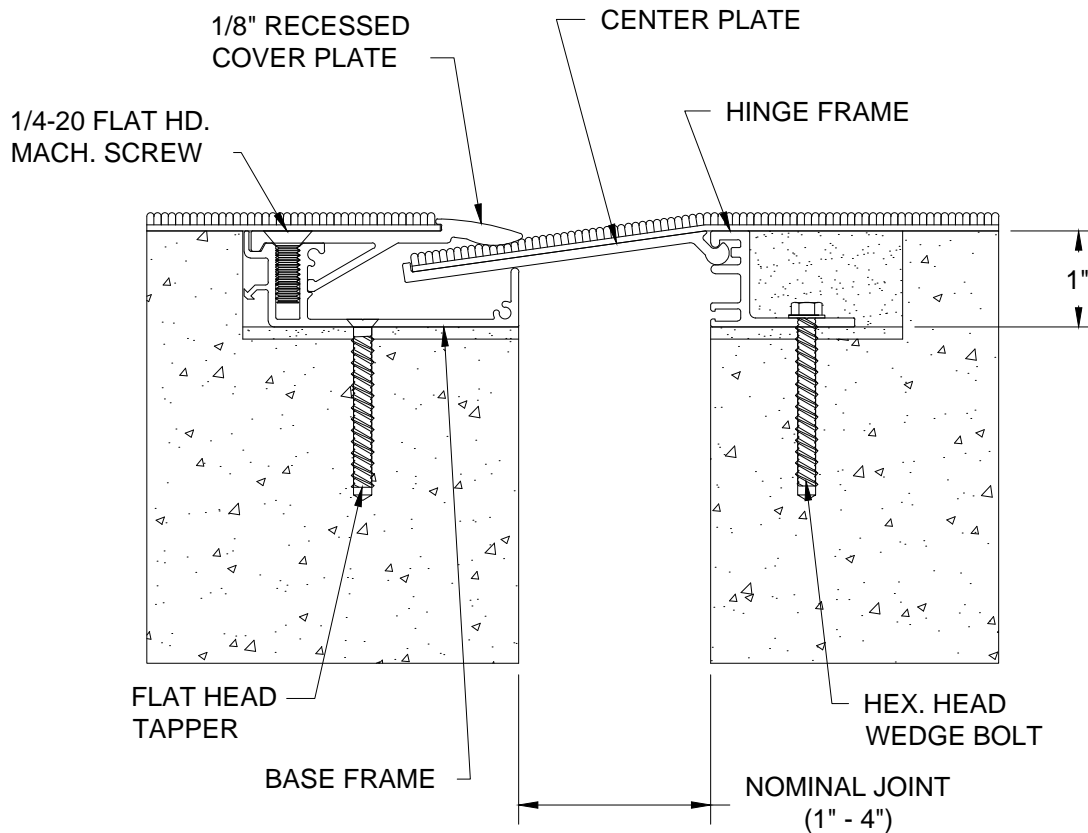

IMPORTANT INFORMATION

Prior to the commencement of Installation, all materials **MUST** be inspected for Damage. Any damage must be reported to CONSTRUCTION SPECIALTIES, INC., as soon as possible, so that replacement materials may be furnished without delay.

All work must be completed as per Architect's Approved "Shop Drawings", and in accordance with these Installation Instructions. When installation is complete, all materials must be protected from damage until the Architect's FINAL INSPECTION.

All materials should be arranged in the order that they are to be installed. All hardware required for each portion of the work should be placed with the appropriate materials.

Please review all Approved Shop Drawings and this Document to familiarize yourself with all the details and components of this assembly.

IMPORTANT:

READ THROUGH ALL INSTRUCTIONS PRIOR TO STARTING INSTALLATION

1/2/2013




Construction Specialties™


6696 Route 405 Highway, Muncy PA 17756
(800) 233-8493 Fax (570) 546-5169 www.c-sgroup.com

This document is the property of Construction Specialties, Inc. and contains CONFIDENTIAL PROPRIETARY INFORMATION that is not to be disclosed to third parties and is not to be used without approval in writing from Construction Specialties, Inc.


GENERAL NOTES



COVER PLATE
1/4" RECESS
12A402000




COVER PLATE
1/8" RECESS
12A401000

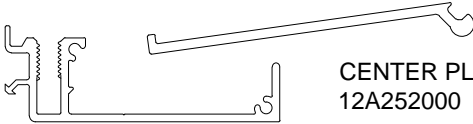

CENTER PLATE
12A252000

BASE FRAME
12A400000




HINGE FRAME
12A253000




WALL FRAME
12A019000


MODEL FYW-200 COMPONENTS



COVER PLATE
1/4" RECESS
12A405000




COVER PLATE
1/8" RECESS
12A404000



CENTER PLATE
12A406000

BASE FRAME
12A403000




HINGE FRAME
12A253000

MODEL FYW-400 COMPONENTS

1. Before beginning installation, review the architectural drawing and approved Construction Specialties Inc. shop drawing to familiarize yourself with the appropriate joint cover models and locations.
 2. Check all of the joint cover components to confirm that the joint cover model and size have been received. Also, check for materials that may have been damaged during shipping.
- Note: Model FYW-200 components are used at 1" joints and model FYW-400 components are used at 3" joints. Report all incorrect and/or damaged components to C/S at 800-233-8493.
3. The FYW models are available with two Cover Plate options, 1/8" and 1/4" recess. Review the architectural drawings and C/S shop drawings to confirm that the correct Cover Plate has been supplied, and is being installed at the appropriate locations, as required for the specified floor finish material.
 4. For the installation of the FYW-100 and 300 models, the Base Frame will be set back from the edge of the joint. This information and other details specific to each installation condition will be shown on the Construction Specialties shop drawings.
 5. All anchors and fasteners are located at 18" o.c., max.
 6. Read through all the steps of these instructions prior to beginning work.

STEP 1

PREPARE BLOCKOUTS

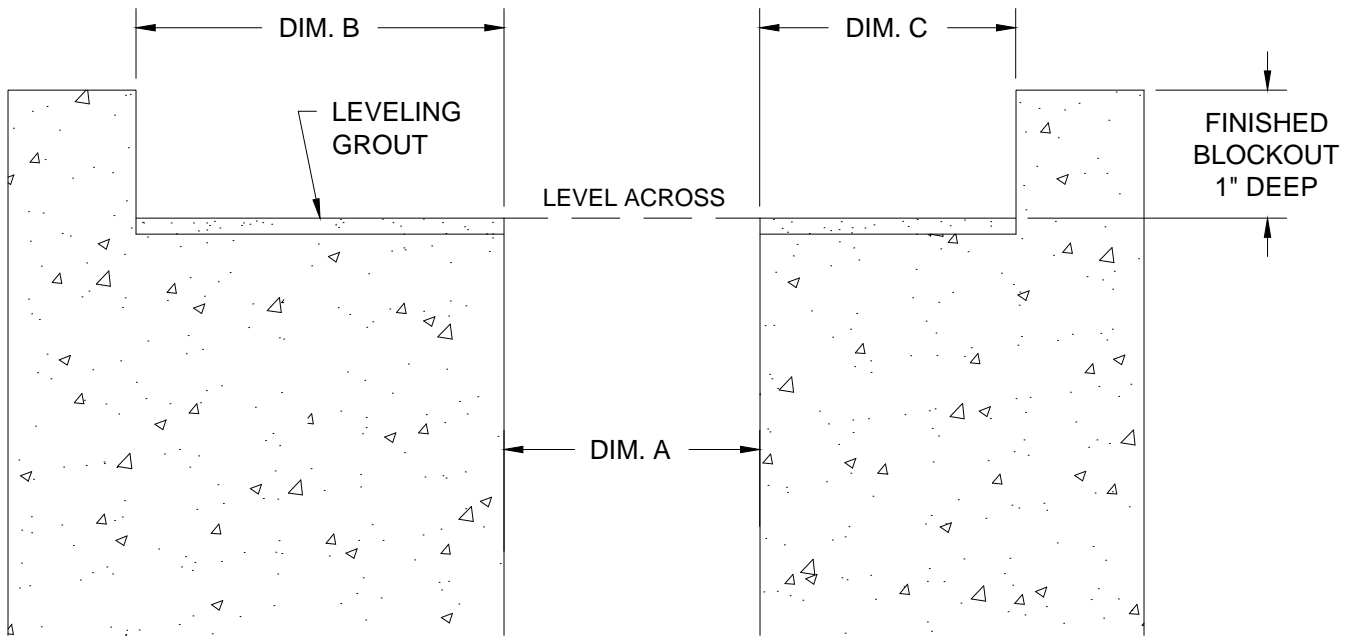

BLOCKOUT DIMENSIONS		
DIM. A	DIM. B	DIM. C
1"	3 7/8"	2"
2"	2 7/8"	2"
3"	6 1/8"	2"
4"	5 1/8"	2"


Step1:

Note: Before beginning installation the blockouts must be prepared to receive the joint cover. The blockout width will vary with model as indicated above or as noted on the C/S shop drawings. The joint cover is to sit flush with the slab surface so as to receive the floor finish material.


1.1) Apply leveling grout to the blockouts as required to provide a continuous, solid, level and flat base for the joint cover.

Note: Blockouts must be level across the width of the joint.

STEP 2

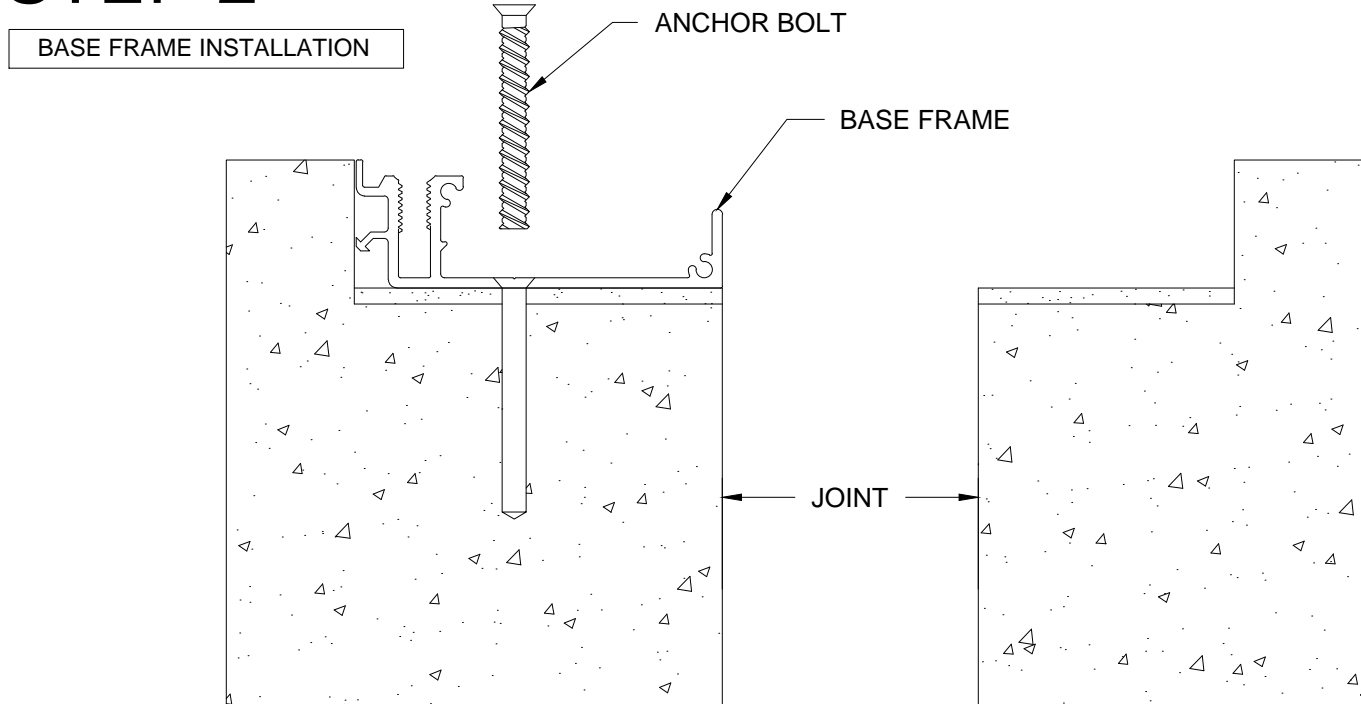

NOTE:
ALL MASONRY
ANCHORS ARE
18" O.C.

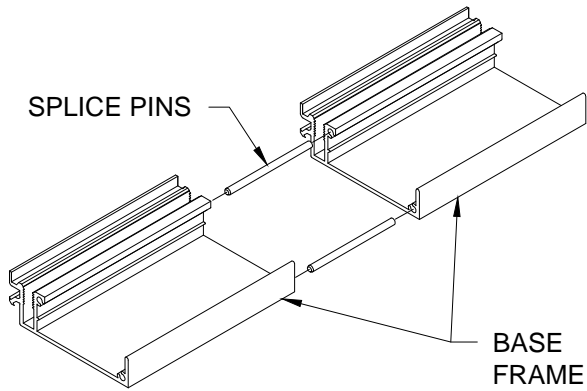

Step 2:

- 2.1) Begin installation of the Base Frames by placing a length of Frame into the blockout. Cut the Frame to length as needed. The Base Frame is to sit level, flat and parallel to the edge of the joint. The Frame should not overhang the edge of the slab or sit above the top surface of the slab.
- 2.2) Using the Base Frame as a template, mark the locations of the Frame anchor bolts.
- 2.3) Remove the Frame and drill the holes for the anchor bolts. The holes are to be drilled with the appropriate size and type of drill bit as indicated by the manufacturer of the C/S supplied anchor bolts.
- 2.4) Reposition the Base Frame and anchor the Frame to the slab with the C/S supplied anchor bolts following the manufacturer's guidelines.


Note: Continue installation of additional lengths of Base Frame, when required, by repeating the steps above. Maintain alignment of adjoining lengths of frame by installing Splice Pins as follows:

- 2.5) After drilling the anchor holes for the adjoining length of Frame, place a C/S supplied Splice Pin into each receiver slot of the installed length of Base Frame. Place a small amount of super glue on one half of the length of the pin and slide it into the receiver in the Frame to hold the pin in position. Allow approximately one minute for the glue to cure.
- 2.6) When positioning the adjoining Frame for anchoring, slide the receiver slots of the frame onto the Splice Pins.
- 2.7) Anchor the frame to the slab.

STEP 3

HINGE FRAME INSTALLATION

NOTE:
ALL MASONRY
ANCHORS ARE
18" O.C.

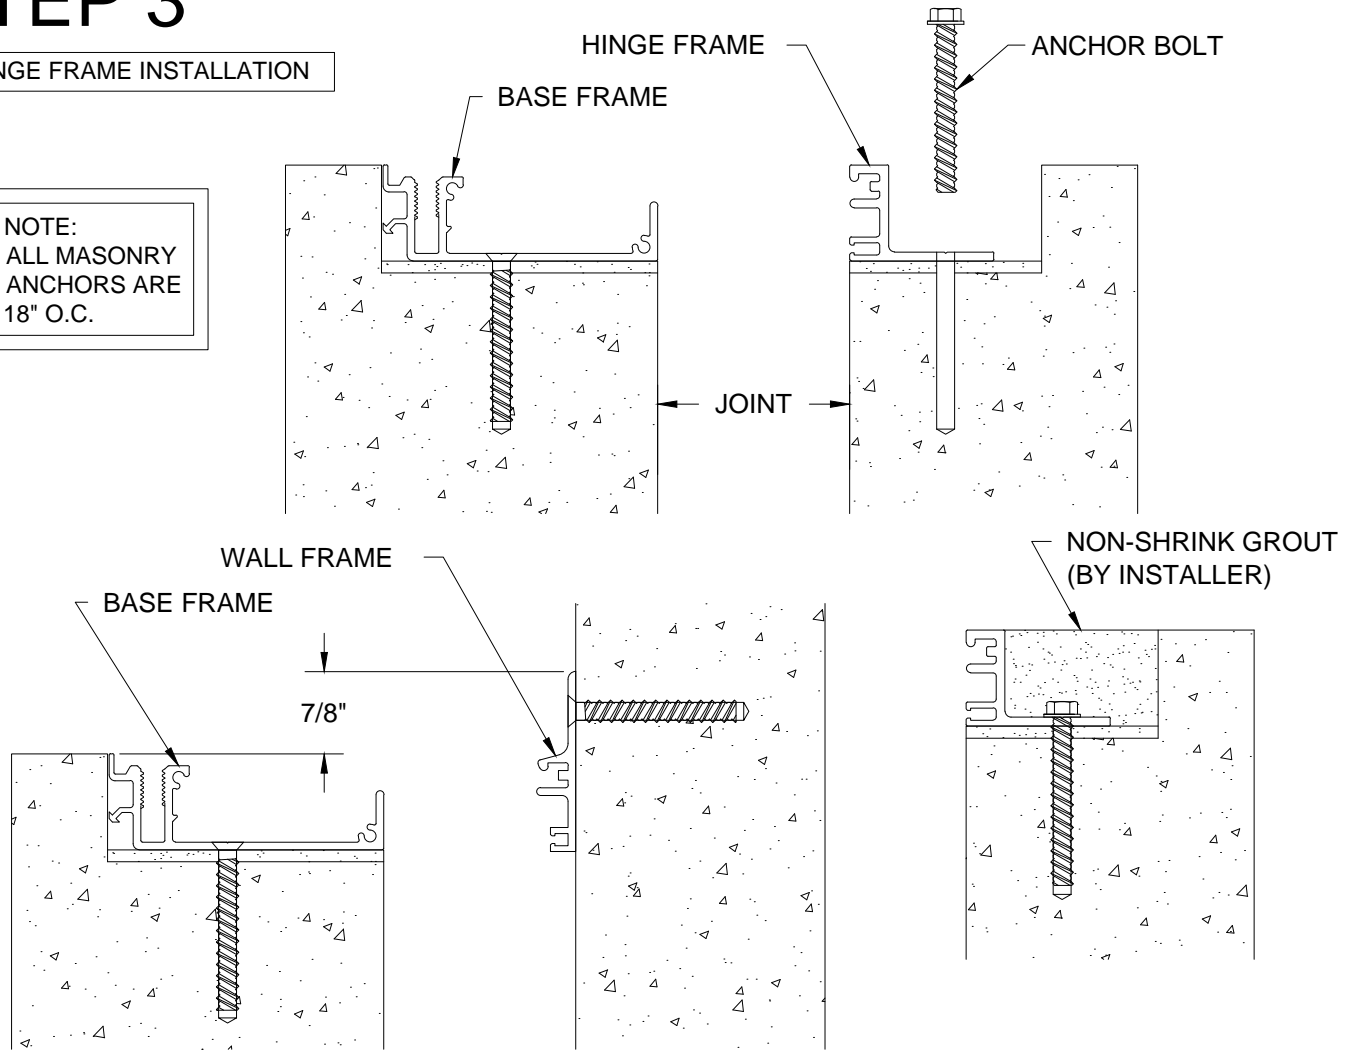

Step 3:



- 3.1) Begin installation of the Hinge Frames by placing a length of frame into the blockout. Cut the Frame to length as needed. The Hinge Frame is to sit level, flat and parallel to the edge of the joint. The Frame should not overhang the edge of the slab or sit above the top surface of the slab.
- 3.2) Using the Hinge Frame as a template, mark the locations of the Frame anchor bolts.
- 3.3) Remove the frame and drill the holes for the anchor bolts. **Note:** The holes are to be drilled with the appropriate size and type of drill bit as indicated by the manufacturer of the C/S supplied anchor bolts.
- 3.4) Reposition the Hinge Frame and anchor the Frame to the slab with the C/S supplied anchor bolts following the manufacturer's guidelines.
- 3.5) Continue installation of additional lengths of Hinge Frame, when required, by repeating the steps above.
- 3.6) Back fill the pocket between the Hinge Frame and slab with non-shrink grout.

FYWW Floor to Wall Applications:

- 3.1w) For Floor to Wall applications the Hinge Frame is replaced with the Wall Frame that attaches directly to the face of the wall adjacent to the joint.
- 3.2w) Measure 7/8" above the top rear surface (highest point) of the Base Frame and mark a line on the wall surface.
- 3.3w) Align the top of the Wall Frame with the line on the wall surface. Mark and drill holes for the appropriate mounting fasteners using the Frame as a template.
- 3.4w) Attach the Wall Frame with the C/S supplied anchors.

STEP 4

CENTER PLATE INSTALLATION

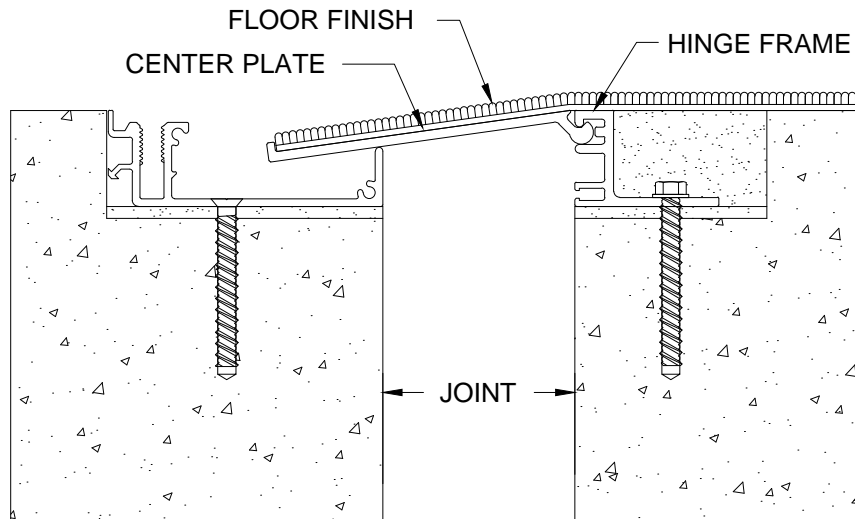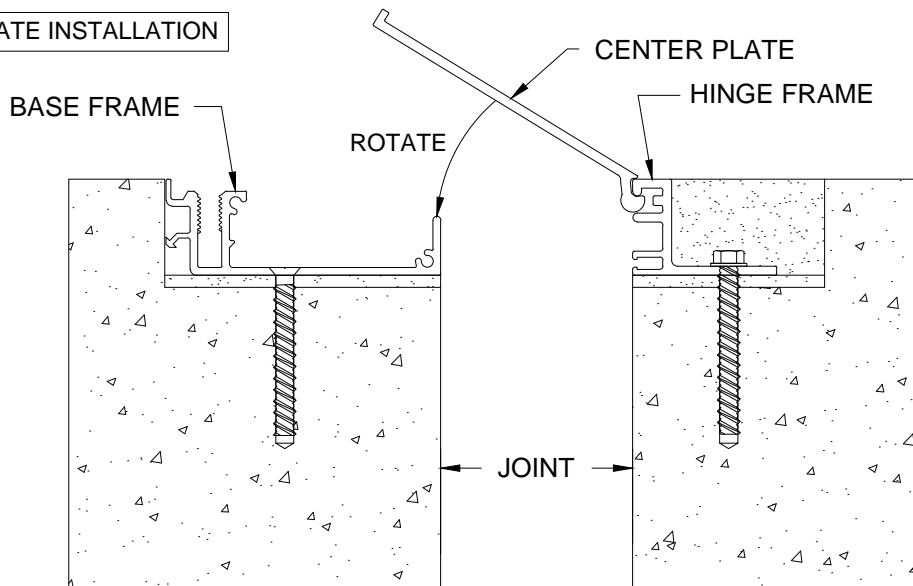

Step 4:

4.1) Begin installation of the Center Plate by placing the hinge end of the Plate into the receiver socket of the Hinge Frame.



Note: The Center Plate should be angled at approximately 45° and the hinge end of the plate must be engaged in the slot along the full length of the Plate.

4.2) While applying some inward pressure on the Center Plate into the Hinge Frame, rotate the Center Plate down towards the Base Frame. The ball and socket hinge must engage and the plate must come to rest onto the Base Frame.

4.3) Continue to install additional lengths of Center Plate as needed.

4.4) With all the Center Plates installed for the run, install the floor finish material so that it extends from the slab, across the top of the hinge frame and across the joint to the finish end of the Center Plate. If the floor finish material is not available at this stage, proceed to Step 5 and apply the floor finish at a later date.

STEP 5

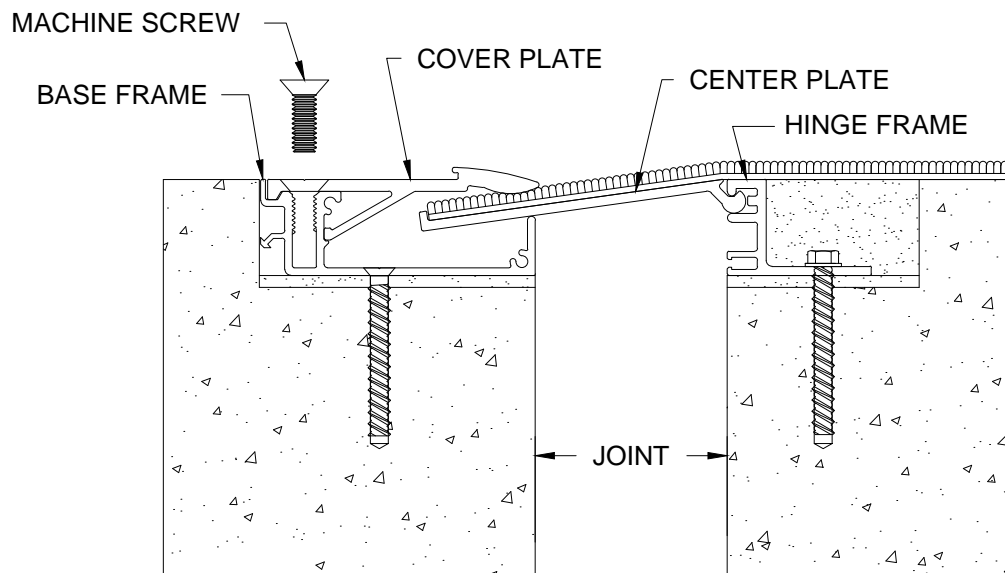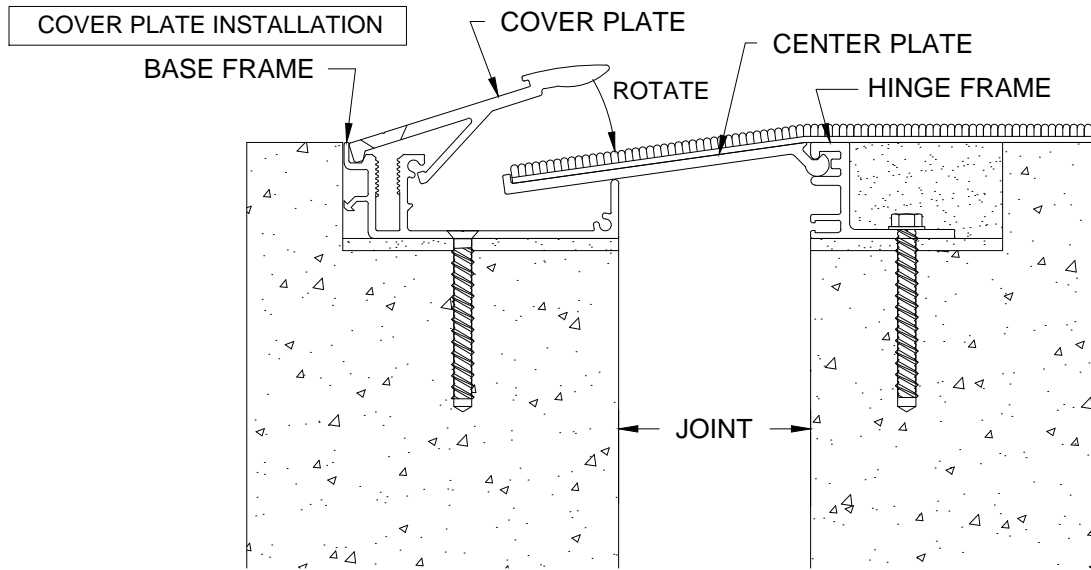

Step 5:

Note: The Cover Plate for the FYW models is available with a 1/8" or 1/4" recess, depending on the thickness of the floor finish material. Check to make certain that the appropriate Cover Plate recess has been supplied and is being applied for the given run of cover.

- 5.1) Begin installation of the Cover Plate by placing the back edge of the Plate into the receiver pocket of the Base Frame. The Center Plate should be angled so that the support leg on the underside of the Cover Plate clears the splice pin portion of the Base Frame.
- 5.2) Rotate the Cover Plate down towards the base frame so that the nosing of the plate rests on the floor finish material, or if the floor finish is not yet installed, until the support leg engages the Base Frame.


Note: If the floor finish has not been installed on the Center Plate, there will be a gap between the Cover Plate nosing and the Center Plate when the Cover Plate is engaged properly in the Base Frame.

- 5.3) Attach the Cover Plate to the Base Frame with the C/S supplied machine screws.
- 5.4) Continue to install additional lengths of Cover Plate as needed for the run.

STEP 6

COMPLETE INSTALLATION

NOTE:
ALL ANCHORS /
FASTENERS ARE
18" O.C.

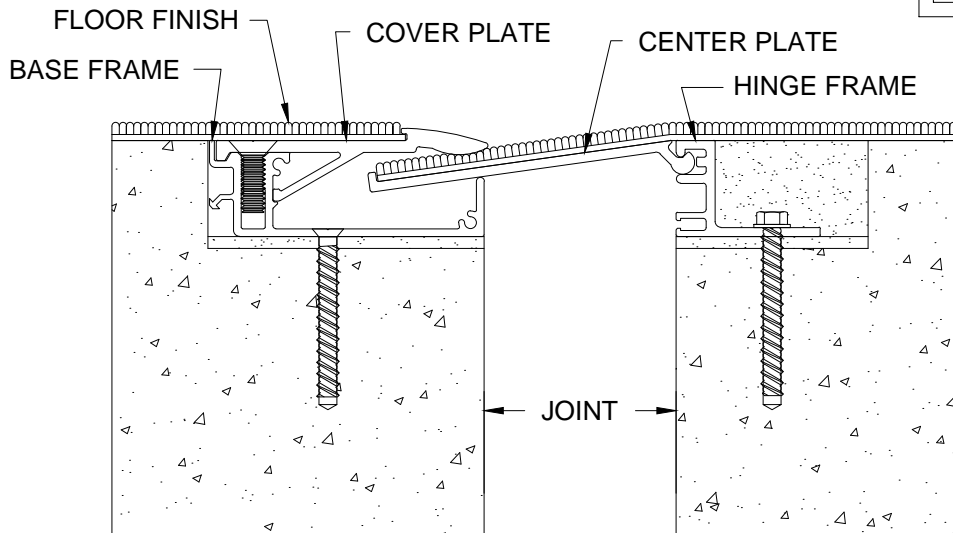

Step 6:

- 6.1) Complete the installation of the FYW joint cover system by installing the floor finish material so that it extends from the slab, onto the Cover Plate and finishes tightly against the nosing of the Cover Plate.

Note: If the floor finish material was not installed during initial installation, it will be necessary to remove the Cover Plates to allow access of the floor finish to the Center Plates. Installation will then progress from Step 4.4 to completion.

- 6.2) The joint cover must be protected to prevent heavy construction loading from damaging the cover. If heavy loads must cross the installed joint cover system, place a sheet of $\frac{3}{4}$ " plywood spanning the entire cover system and cross the joint on the plywood. The plywood sheet will distribute the load preventing damage to the cover system.